 



Zoller TMS Export from MachiningCloud

Export from MachiningCloud – Single Item


1. In MachiningCloud, search for your item and select “Export”



2. From the Export options select “Zoller XML Format”

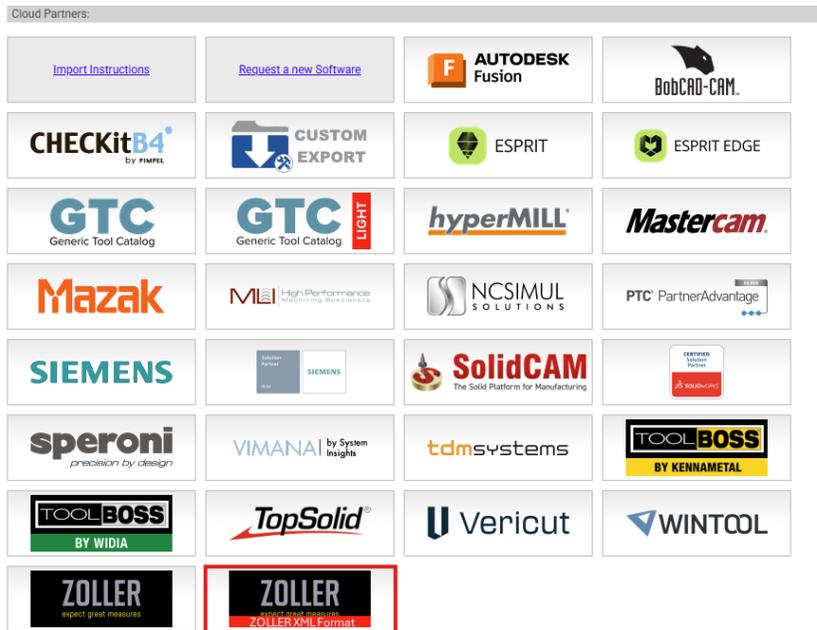

3. Once the export is complete, download the file

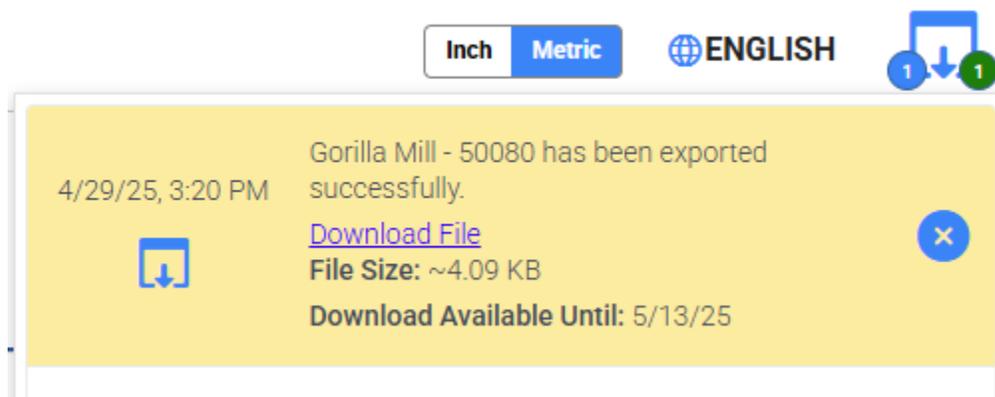

Import to Zoller TMS

1. Open Zoller TMS

2. In Modules - under “Basic Data” – select “Modules for Import / Export”
3. Scroll down and select “Single Components”
4. Go to tab “Import Settings” and set the filter to “ZOLLER-ZIP”
5. Hit F2 (button for “Import Data”)
6. Select your downloaded file

Assemblies

- Assemblies are also supported in the MachiningCloud-TMS interface
- In MachiningCloud, create your assembly with your desired items and in the assembly dialog select “Export”
- In Zoller, go to modules for Import/Export -> Tools

Jobs/Setup Sheets

- Jobs and setup sheets are also supported in the MachiningCloud-TMS interface
- In MachiningCloud, create your job with your desired items and in your job management select “Export”
- In Zoller, go to modules for Import/Export -> Setup Sheets